

Next Pole Bracket PhaseOne

E-no: 2700657 S-no: 3506323

Assembly instructions

Included fasteners:


2 x Screw MRX PZ

M6x8

2 x Screw MRX PZ



M6x10

All electrical installation work must be carried out by an authorized installer and meet the installation requirements in the country of use.

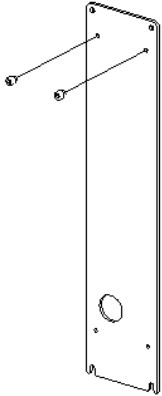

Mounting charger to the bracket

1. Prepare the bracket with screws (M6x8) to hook the charger. Adjust them until the charger fits steady.
2. Hook the charger to the bracket. Fasten the charger with the lower screws (M6x10).

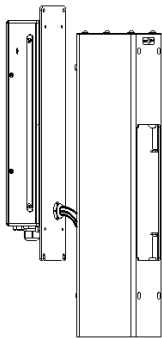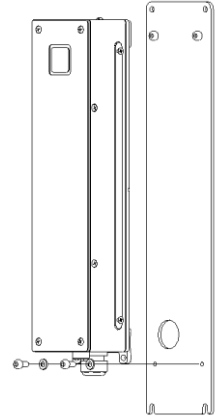


The electrical wiring

3. Pull enough cable out through the cable entry hole.
4. Ensure that the wiring is done so that the cables cannot be damaged. Tighten the tension puller.
5. Connect the brackets grounding point to ground

Mounting the charging box

6. Mount the bracket with the charger to the Pole. Use existing M6x20 flangescrew.
7. Connect the charging box according to the charging box manual and complete the installation. When installing two brackets, use existing flange bolts and follow step 1-7 again.

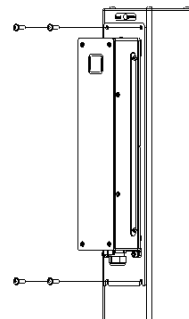

Next Pole Montageplåt PhaseOne

E-nr: 2700657 S-nr: 3506323


Monteringsanvisning

Medföljande fästelement:

2 st M6x8 MRX PZ



2 st M6x10 MRX PZ

Allt elinstallationsarbete måste utföras av en auktoriserad installatör och uppfylla installationskraven i användningslandet.

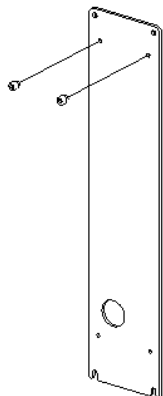

Montera laddaren på Montageplåt

1. Skruva i M6x8 skruvarna så att laddboxen kan hängas på och sitter stadigt.
2. Haka på laddboxen och skruva fast laddaren med M6x10 skruvar.

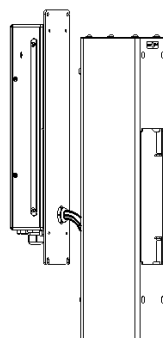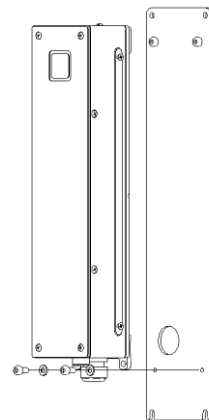

Kabeldragningen

3. Ta fram tillräckligt med kabel till laddboxen genom kabelgenomföringen.
4. Var noga så att kablens inte skadas eller kan komma att skadas. Dra åt förskruvningen.
5. Anslut montageplåtens jordpunkt till jord.

Montera Montageplåt PhaseOne på Next Pole

6. Skruva fast plattan med laddboxen på Next Pole. Använd M6x20 flänsskruv.
7. Koppla in laddaren enligt laddarens instruktioner.
Vid dubbelmontage, använd befintliga flänsskruvar och följ steg 1-7 igen.

